



## AOM713 Troubleshooting Guide

### Monitor will not power up – no backlight on power button

- Check fuse.
- Confirm 12v+ to monitor.
- Confirm ground.
- Check vehicle's fuse and circuit for proper operation.

### No image on screen

- Verify monitor is on correct camera input.
- Verify cable is connected to monitor.
- Verify camera is connected to cable for each camera.
- Connect camera direct to monitor, bypassing camera cable. If image appears, replace cable.
- Connect known good camera and cable to monitor.
  - If image appears connect cable to existing camera.
    - If image remains replace original cable.
    - If image disappears replace original camera.
- If more than one camera is connected and no image on any input, disconnect all cameras and then reconnect each camera individually. If you get an image on one or more of the cameras, then this would indicate a bad camera or camera cable.

### Image is reversed (backwards)

- Use the SETUP MENU to adjust image orientation between Mirror/Normal modes to get correct image.

### Inputs do not trigger properly (Standby or otherwise)

- See owner's manual for proper wiring.
- Confirm 12v + to each appropriate trigger lead.
  - *Note:* Trigger will remain active as long as there is 12VDC+ to that wire, preventing control or access to other inputs/cameras.

### No audio

- Verify selected camera supports audio.
- Verify volume setting.
- Confirm that the audio trigger (WHITE wire in monitor's power harness) is connected to 12v+.